



Please read page 3 for
Clear Reticle Instructions!

5X PRISM SCOPE

GEN II

WITH PATENTED .223/5.56, 5.45X39, .308 ACSS® RETICLE



Page 3	Achieving a Clear Reticle Picture READ THIS FIRST
Page 4	Reticle Illumination Knob
Page 6	Getting to Know ACSS
Page 7	Establishing Zero
Page 8	Bullet Drop Compensation
Page 9	Wind and Bullet Drift
Page 10	Leading your Target
Page 11	Ranging
Page 13	Specifications
Page 14	Lens Care

Thank you for choosing this Primary Arms optic.

If you have any questions about your new optic or any of our other products, visit us at www.primaryarmsoptics.com, email us at info@primaryarmsoptics.com, or give us a call at 713-570-1910. The customer service team at our headquarters in Houston, Texas will respond promptly.

If you have any problems with a Primary Arms product, we urge you to contact us immediately and let our customer service professionals handle the situation for you. There is no need to return the scope to your retailer.




5X PRISM SCOPE

GEN II

WITH PATENTED .223/5.56, 5.45X39, .308 ACSS® RETICLE

Due to this scope's internal prism design, when viewed at certain angles and distances the reticle may appear canted (tilted to the left or right). Each individual scope has been checked for correct reticle presentation and illumination. The scope should be mounted on a rifle and viewed using the correct eye relief, and the reticle will appear in its proper alignment. Our high quality anti-reflection objective lens attachment is also available, part numbers PA5XKF and PA5XKF-FDE.

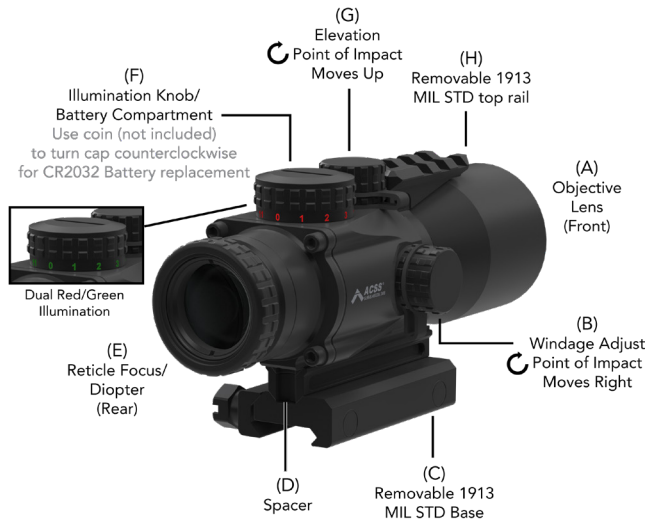

ACHIEVING A CLEAR RETICLE PICTURE

Setting the adjustable diopter ring (E) at the rear of the eyepiece is a critical first step to successful precision shooting. Looking at a featureless light background like a clear blue sky or blank wall, the reticle should appear sharp and crisp. If it does not, you need to adjust by turning the diopter ring (E). Look at the scope with quick glances and adjust until the reticle is clear at first glance. This is a one-time adjustment. Because everyone's eyes are different, the ideal adjustment will vary from person to person.

The reticle details may appear small when not looking at the ranges they are set for, beyond 300 yards. Shooting at those ranges is best done from a well-supported position.



RETICLE ILLUMINATION

The illumination knob on the top of the scope is marked with numbers of increasing brightness from 1 to 5 in each direction from 0 or “off”. There are two “off” settings, divided between 5 red partial illumination settings and 5 green partial illumination settings. The knob unscrews counter-clockwise, holding a CR2032 battery with the positive (+) side facing towards the cap. Reticle illumination at the lower settings is useful in low light situations like sunrise and sunset. The highest two settings are “daylight bright” settings. Using these settings in low light situations will overpower your eye’s ability to see the target and make the reticle appear distorted. The right amount of illumination creates a clear contrast between the reticle and your intended target, without straining the eye.

Illumination Knob/Battery Compartment






THE REMOVABLE BASE AND SPACER

Thread locker is recommended on the base and accessory rail screws. The 3mm hex base screws may be removed for use with AR-15 carry handle upper receivers in conjunction with our Steel Knurled Head Thumb Screw, part no: 92581A320.

The 5x Prism Scope features a removable spacer in between the base and the scope body. Use the spacer for firearms with straight line stocks such as AR-15s. Removing the spacer brings the scope body lower for use with firearms with stocks located lower than the receiver, like AK-47s. The scope body is compatible with full size ACOG® style mounts with or without the spacer installed.


THE REMOVABLE 1913 MIL STD RAIL

The top mounted 1913 MIL STD rail (B2) is useful for mounting a reflex sight or other accessories above the prism scope. It is removable by turning the four T10 torx screws (A1) counterclockwise and removing them. Removing the 1913 rail shaves a bit of weight and bulk from the scope. To replace the 1913 rail, torque the screws to only 5 inch pounds after applying a small amount of blue thread locker. Do not overtighten the screws, this is a very small amount of torque!

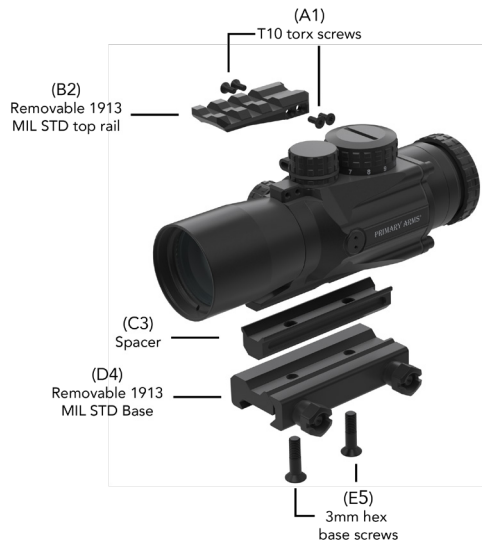

GETTING TO KNOW THE ACSS® RETICLE

The ACSS® (Advanced Combined Sighting System) is a giant leap forward in reticle design that uses bullet drop compensation correlated with range estimation, wind and moving target leads in one simple to use system. The ACSS reticle increases first hit ratio and decreases time on target dramatically. It is a two-part reticle that allows you to be very fast from 0-300 yards and very accurate from 400-800 yards.

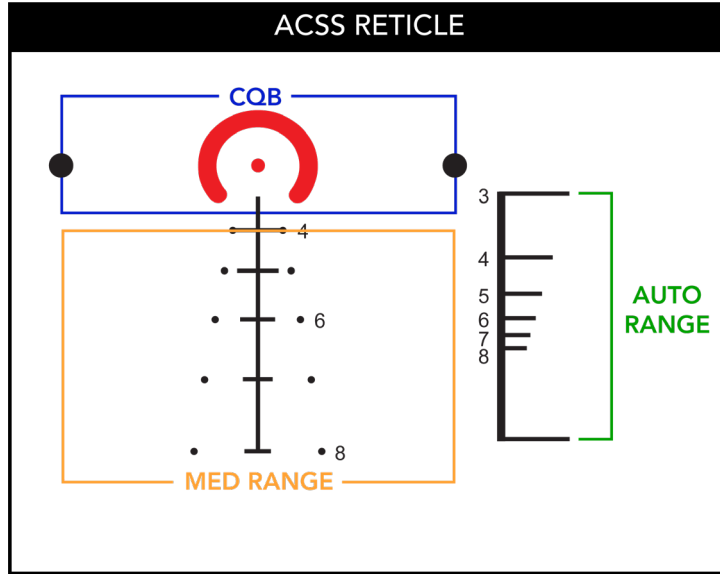

DIALING IN FOR YOUR BARREL LENGTH AND AMMUNITION

Using a bipod or sandbags, preferably on a bench or in the prone position, adjust your turrets to dial in your point of impact to the center dot. Each click is 0.33 MOA, or 0.33 inch at 100 yards.


Your point of impact will vary depending on type of ammunition, barrel length, and altitude above sea level. For 5.56 NATO and 5.45x39 loads, match your ammunition type and barrel length with your altitude above sea level, and zero your scope at the distance indicated. For other loads, find your bullet weight and velocity and zero your scope at the distance indicated. Plus (+) and minus (-) numbers indicate desired bullet impact in inches above or below your point of aim. For example, a shooter firing M855 using a 16" barrel will want to sight in a half inch high at 1,000 ft. above sea level, dead on to point of aim at 2,000 ft. above sea level, and a half inch low at 3,000 ft. above sea level, zeroing at 100 yards.

5.56mm					.223 Remington	5.45 x 39mm				
M855 62gr	1000 ft.	2000 ft.	3000 ft.	0 Distance	55gr VMAX Zero at 100 yards 3100 - 3200 fps	7n6 53gr	1000 ft.	2000 ft.	3000 ft.	0 Distance
14.5" Barrel	+1.0	+0.5	0	100 yards	60gr VMAX Zero at 100 yards 3050 - 3150 fps	16" Barrel	0	0	-0.5	100 yards
16" Barrel	+0.5	0	-0.5	100 yards	69gr SMK Zero at 100 yards 2900 - 2950 fps	6.5 Grendel				
20" Barrel	0	-0.5	-1.0	100 yards	75gr HNDY +0.5" at 100 yards 2700 - 2750 fps	123gr VMAX Zero at 100 yards 2600 fps				
M193 55gr	1000 ft.	2000 ft.	3000 ft.	0 Distance	77gr SMK +1.0" at 100 yards 2700 - 2750 fps	123gr VMAX Zero at 50 yards 2550 fps				
14.5" Barrel	0	0	0	50 yards	7.62x51mm / .308 Winchester					123gr VMAX Zero at 200 yards 2500 fps
16" Barrel	+1.0	+0.5	0	100 yards	M80 147gr +1.0" at 100 yards 2650 - 2700 fps	6.8 Rem SPC				
20" Barrel	0	0	-0.5	100 yards	168gr SMK +1.0" at 100 yards 2600 - 2650 fps	120gr SST Zero at 100 yards 2460 fps				



GETTING TO KNOW YOUR BULLET DROP COMPENSATION (BDC)


Gravity will affect your bullet's trajectory (or path). The BDC ladder starts at the center dot and finishes at the 800 yard mark indicated by the number (8). Simply aim using the hash mark that coincides with the range to target. For targets at ranges between hash marks you can split the difference. For example, for a target at 450 yards you should aim halfway between the 400 and 500 yard hash marks. We recommend that you establish a steady, supported position in order to utilize the BDC.

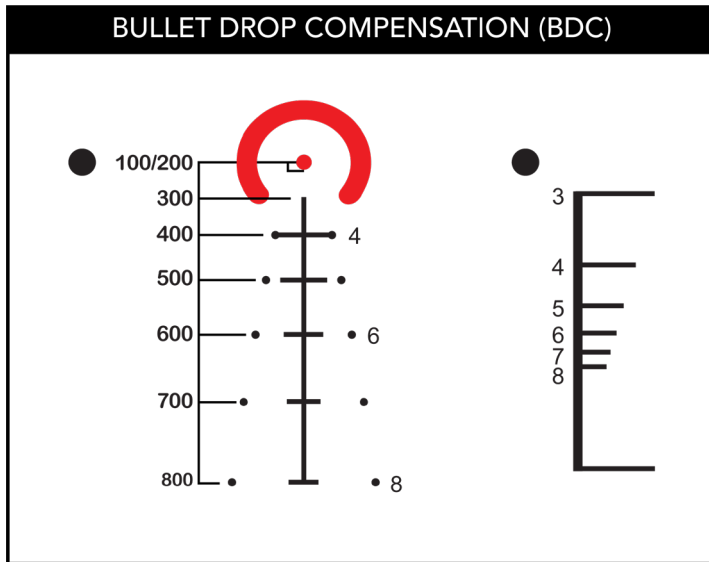




UNDERSTANDING THE WIND AND BULLET DRIFT

Notice the 5mph wind hold dots aligned with the BDC. Wind will cause the bullet to drift left or right depending on wind direction. Understanding wind is important, as even a 2mph wind at a 90 degree angle to the bullet's path can cause the bullet to drift over 10" at 600 yards. The wind holds correspond to the BDC ladder and represent how much a 5mph wind will push the bullet at that range. For a wind pushing left to right, use the dots on the right side of the reticle. For a wind pushing right to left, use the dots on the left side of the reticle. You can use the dots as a starting point in different conditions. For example, if you have approximately a 2.5 mph wind, you would hold half-way to the dot. If you have a 10 mph wind, you would double the hold of the dot, and so on.

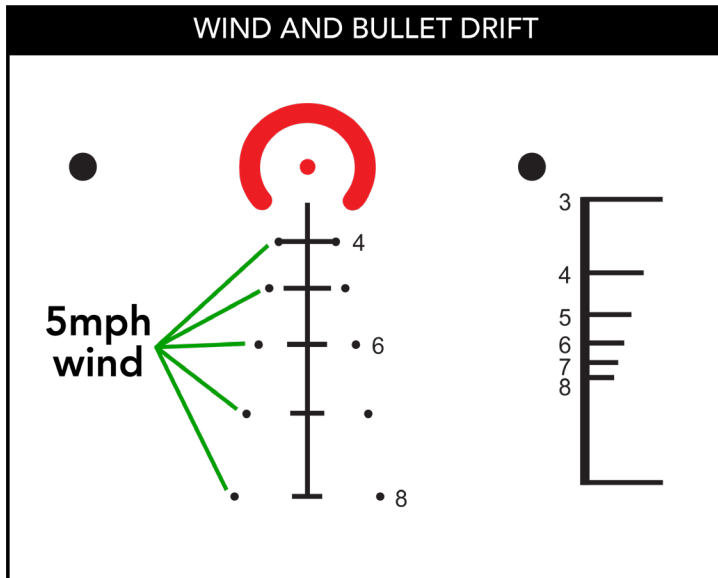

LEADING YOUR TARGET

The average target moves at 8.6 mph. The "lead dots" are set for a target moving at a 90-degree angle to the shooter. Depending on the direction of the target's movement, fire using the "lead dots" instead of the center dot in red. They are best used at 100 to 300 yards and are highly effective on targets of opportunity.

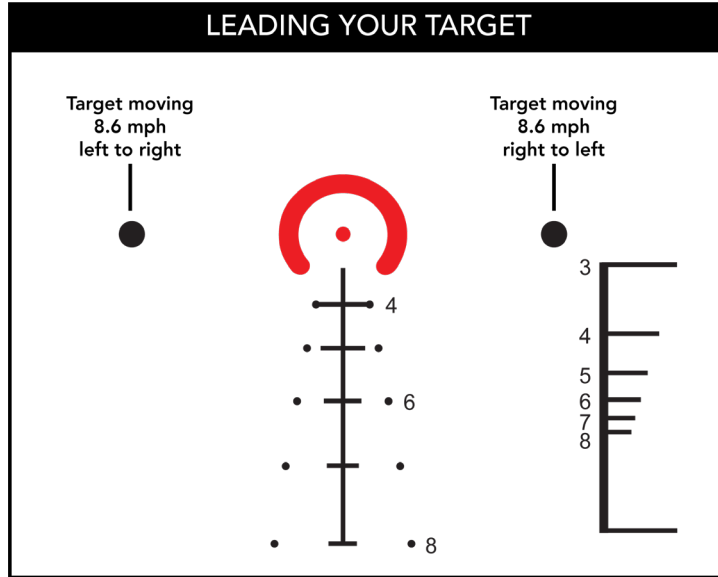

HOW TO RANGE YOUR TARGET

ACSS automatic ranging greatly reduces the time between spotting the target through the scope and firing a correctly aimed shot. There is NO need to run data, do math, or physically adjust the scope's settings. Wrong range estimation is the number one reason shots are missed—ACSS directly addresses this issue!

Knowing the proper range of your target is crucial in order to use the right hold on the BDC. The horizontal bars range estimate center mass on targets 18" wide, and predators or small game with an approximately 18" measurement from shoulder to hip. Simply line up the target's width with the appropriate line to determine range to target. For example, an 18" wide target that appears to be the same width as the ranging line with a "6" next to it will be 600 yards away. This method is useful when the target's height is partially obscured, as with a target in tall grass.


Bullet drop compensation is correlated with the horizontal ranging. Once you have determined range to target using horizontal ranging, you are already using the correct holdover to fire accurately (assuming no need to shift left or right due to wind).

Vertical ranging is calibrated for a 5'10" tall target. Looking through the scope at the target, line up the bottom of the target with the lowest line on the ranging ladder. The line that coincides with the top of the target indicates the distance to the target. For example, if the top of the target touches the second line from the top, the target is 400 yards distant. The ranging lines may be used as reference points to make more precise, yet quick ranging determinations. For example, a 5'10" target with its top midway between the top ranging line and second ranging line will be approximately 350 yards away.



AUTO RANGE

Auto range 18" and 5'10"
avg target height

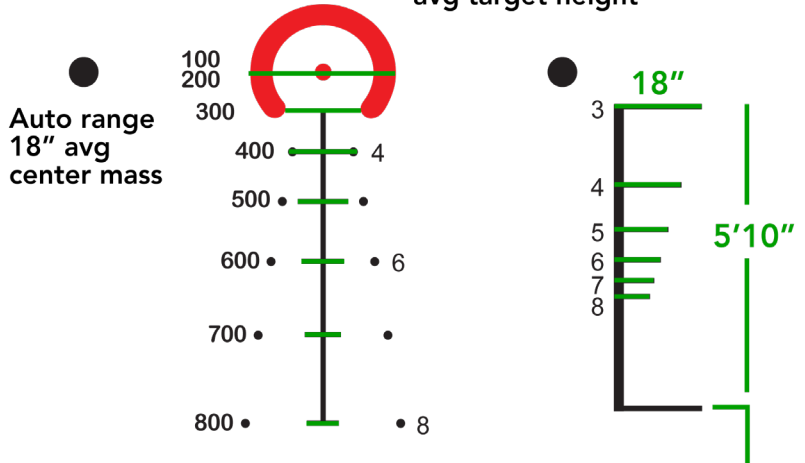

Place bottom of target
here and range upwards





SPECIFICATIONS

Magnification: 5x	Exit pupil: 7 mm
Objective lens diameter: 36 mm	Field of view: 18.8 feet @ 100 yards
Eye relief: 2.5" - 3.0"	Click Value: 0.33 MOA
Ocular lens diameter: 25 mm	Total windage and elevation adjustment: 35 MOA


FEATURES


Red or green reticle illumination	Length (w/o Lens Covers): 5.81"
Fast focus eyepiece	Weight (w/ Battery, w/o Lens Covers): 18.4 oz.
Waterproof: Meets IP67 standard	6061 aluminum, anodized matte black
Fog resistant	6061 aluminum, flat dark earth coated finish
Fully multi-coated lenses	Uses one CR2032 battery (included)
Nitrogen purged	Lifetime warranty (see website for details)
Flip-up lens covers included	

Specifications may vary and are subject to change without notice.

LENS CARE

Please do not use any organic solvent such as alcohol or acetone on your scope. First, blow dust or any foreign objects off of the lens. Then, use a soft cotton or microfiber lens cloth to clean any fingerprints or smears off the lens. Alternatively, you may use a piece of professional lens paper for further cleaning, if necessary.

 **WARNINGS:** Always ensure your firearm is unloaded (chamber empty and magazine removed) before installing optics or accessories.

 **WARNINGS:** Improper installation of firearm component parts or accessories may result in death or serious personal injury. If you are not properly trained in the installation of these parts, have them installed by a gunsmith or armorer.

REMEMBER: THE FOUR RULES OF FIREARMS SAFETY

1. Treat every firearm as if it were loaded
2. Never let your muzzle cover anything you are not willing to destroy
3. Keep your finger off the trigger until your sights are on target
4. Be sure of your target and what is behind it



NOTES:



NOTES:





PRIMARY ARMS®

5X PRISM SCOPE

GEN II

WITH PATENTED .223/5.56, 5.45X39, .308 ACSS® RETICLE

WARRANTY

Your Primary Arms 5x Prism Scope is covered by the Primary Arms Lifetime Warranty. If a defect due to materials or workmanship, or even normal wear and tear, has caused your product to malfunction, Primary Arms will either repair or replace your product. You can find more details at www.primaryarmsoptics.com

Email: info@primaryarmsoptics.com

Phone: 713-570-1910

www.primaryarmsoptics.com

MANUFACTURER PART NUMBER	UPC	FINISH
PAC5X-GENII-ACSS-5.56	8 18500 01314 3	MATTE BLACK
PAC5X-GENII-ACSS-5.56-FDE	8 18500 01315 0	FLAT DARK EARTH